


ProgRama How to remove 2038201526 and 2038201626 Seat Controller without any damage

1. Lift up Seat and disconnect Seat Controller Front Connectors

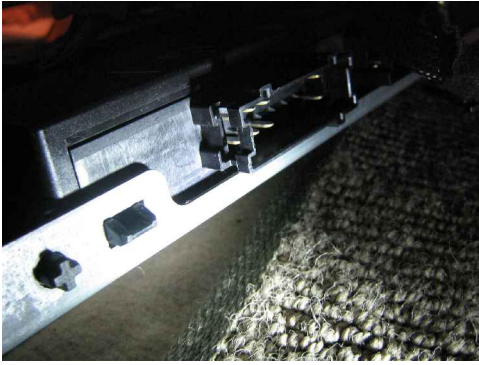


2. Rear Seat Controller harness is connected with a plastic tie to its frame. Please cut this off.




3. Disconnect rear connectors




4. Pop up rear plastic frame holders and carefully remove seat controller with its frame

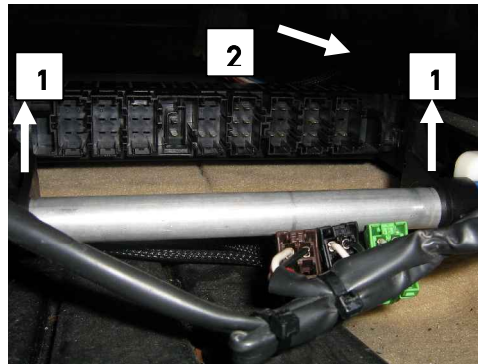

5. Take out seat controller at the rear of the seat

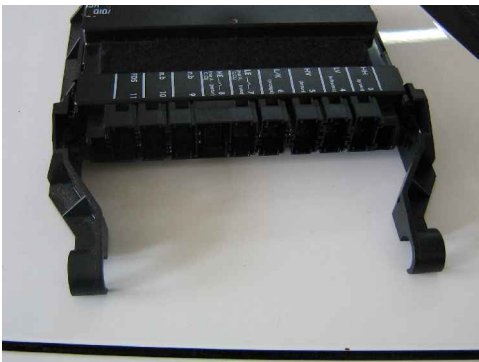

6. Take seat Controller out from its frame by gently pushing left and right security clips

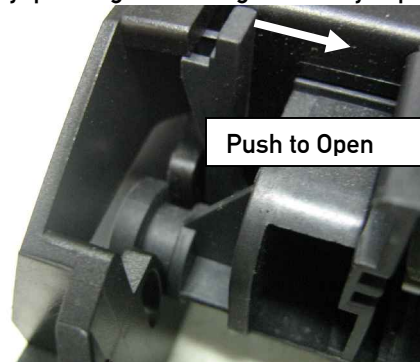

7. Returning cores must have the main plastic holder supports



Please return the cores to your distributor for credit.

Thank you for your cooperation!