

# ProgRama Inc. How to remove and install a 1408300285 Climate Control Unit



1. Turn ignition ON, Pull shifter back



2. Remove radio by using the right tool



3. Loosen inside screw and remove cover



4. Take out L-R vertical start-headed screws



5. Take out L-R vertical screws



6. Carefully remove frame



7. Remove lower wood frame



8. Remove upper wood frame



9. Disconnect Switches and connectors



10. Unscrew, remove and disconnect Unit



11. Necessary tools

## How to read and delete Fault codes

1. Set Left Temperature Control to Maximum (HI),  
Right Temperature Control to Minimum (L0)
2. Turn Ignition ON and within 10 seconds Push and hold down "REST" and "0" buttons
3. When inside circulation starts flashing then release buttons and read fault code at right LCD
4. Delete Fault code by pushing Left AUTO button
5. Step to the next Fault code by pushing Right AUTO button
6. Repeat steps 4-5 until no fault codes remain