

Instructions (20132)

THIS UNIT FITS ONLY:

380SL 1982 380SEC 1982380SEL 81 - 82

Perform steps 1 - 2 prior to installation.

1. Turn off ignition and disconnect connector from Idle Speed unit.
2. (+) pin 1 → (-) pin 5 = greater than 5 ohms, **IF NOT, REPLACE AIR SLIDE OR WARRANTY IS VOID.**

ProgRama needs your experience and inputs to make a better product. Phone or email tech support today 8:30 am to 5:00 pm EST, with your idea, question or problem.

1 800 668-8843



THREE YEAR WARRANTY

- 1- Call your Wholesale Distributor for a replacement part.
- 2- If you have difficulties to obtain a replacement, call ProgRama, Inc. We offer up to 48 hrs. turn-around time for bench testing service.
- 3- Visit our web site www.programa.com and become familiar with our products and services.

Warning ! Return Core In ProgRama Box for Proper Core-Deposit Refund

GENERAL TROUBLESHOOTING NOTES

ORIGINAL UNIT PROBLEM

Symptoms Test/Suspect Problems Solution

Fast idle.	Check for short in Air Slide. Ignition off, disconnect connector from Idle Speed Unit. (+) pin 1 → (-) pin 5 = greater than 5 ohms. Note: 8-12 ohms is optimal	Replace Air Slide unit or warranty is void.
------------	--	---

NEW UNIT PROBLEMS

Symptom Test/Suspect Problem Solution

Fast idle or will not run at all.	Air Slide stuck.	Repair/replace as needed.
-----------------------------------	------------------	---------------------------



Warning ! Return Core In ProgRama Box for Proper Core-Deposit Refund

Thank you for buying a quality part from ProgRama, Inc of Boca Raton, Florida !