


RLCM01 REMOTE CONTROL USER MANUAL

Key Functions

← →	Toggles screen
↓ ↑	Changes menu item
ENTER	Selects highlighted item
ESC	Exits Current Screen

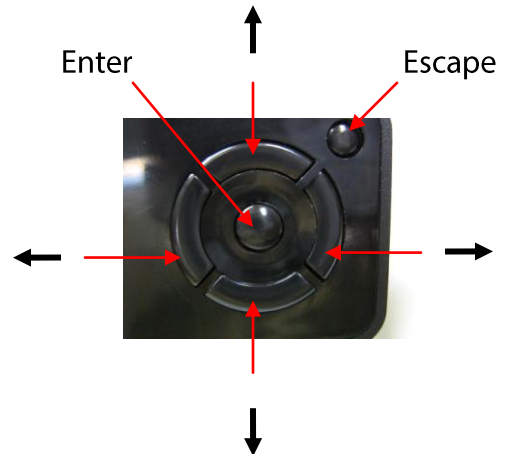

Main Menu

The Main Menu has the following options:



Turn module OFF/ON **Select Vehicle**

- Disables or enables the functions of the lowering module.
- Allows end user to select vehicle in which the module is installed.

Adjust Wheels

- Sets desired height for each wheel.

Set Speed Limiters

- Sets speed at which vehicle height adjusts.

Set Units

- Sets numeric system to use (Metric or Imperial).

Screensaver

- Turns screensaver on or off.

Set Brightness

- Sets the illumination of the unit.

About

- Displays information about the software and hardware version.

Operation Instructions

1. Press ESCAPE key for the **Main Menu**.
2. Select the desired menu option by ↓ ↑ keys and press ENTER.
3. Change the actual parameter and press ENTER.

Turn module OFF/ON

Turn lowering module off and "FACTORY HEIGHT [Module is OFF]" appears on the screen. Only "Turn module ON" function will be available after this selection.



Select Vehicle

Select the exact vehicle group and type of your car from the available list.



Adjust wheels

Depends on what kind of car you have you will get to one of the following screens (Picture 6). Highlight the desired wheel by ← → and change its height by ↓ ↑ keys (FL–Front Left, FR–Front Rear, RL–Rear Left, RR–Rear Right). If you reach one of the limits then only one arrow will be flashing. Always approve your selection by pressing ENTER.



Set Speed Limiters


This menu option is available only for certain cars!

Set up the desired speed limit value where you want your car to raises at from the actual height to the half factory or to the full factory level. The value for the half way raise should be less than the full way one. Over the selected speed limit, this function will take over the control of your lowering module. You won't be able to select any menu options unless the car's speed will go under the first limit parameter.




Set Units

Select the numeric system you want to use with your module (metric units for mm, Km/h or Imperial units for inch, mile).

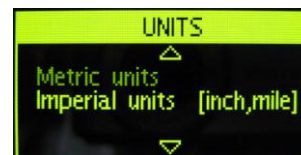

Screensaver ON/OFF

By turning this function on you can prolong your display's life. In this case if no key has been pressed for 1 minute the display will automatically turn off. By pressing any new keys it returns to the main menu where every function will be locked but the "Turn module ON".

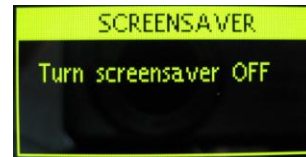

Set Brightness

Select the desired value for your screen (Low, Medium, High).



About

Select this option to check the HW and SW version of your lowering module.



Main screen

The display content depends on your previous selections.

At the right upper corner of the screen there is the selected vehicle type.

The right side of the screen shows the actual speed and height (you can see this information at the left side of the screen on a bar graph too) parameters.

On the bottom of the screen there is information about the selected speed limit (or "Speed limit OFF") at which the lowering module will automatically turn off.

